 
 
 
 








Please install the fixture onto a sufficiently strong, load bearing surface.

If this product is being installed outdoors, or a location where the product will be exposed to high levels of moisture, it is suggested that you should apply a silicone seal around the back-plate/canopy. (Not supplied)


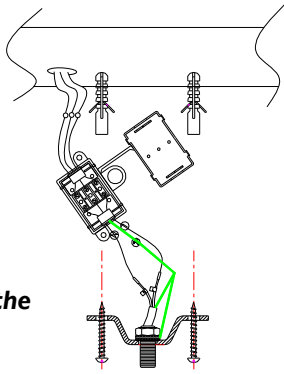


ASSEMBLY STEPS:

- 1. D → A, E
- 2. D → E, F
- 3. B → A
- 4. C → A

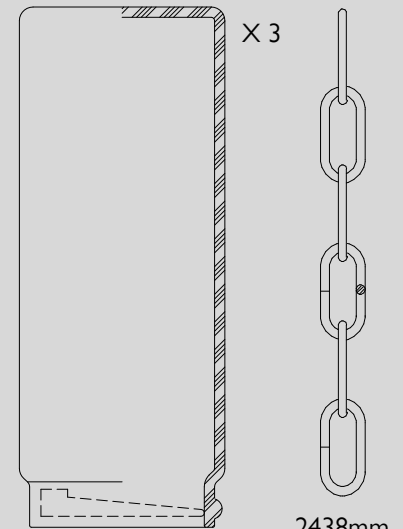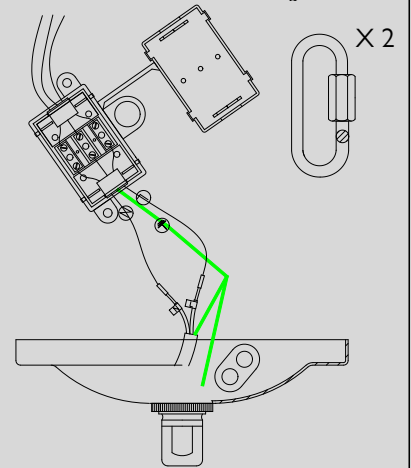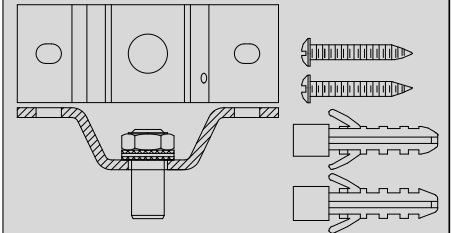

2438mm Chain

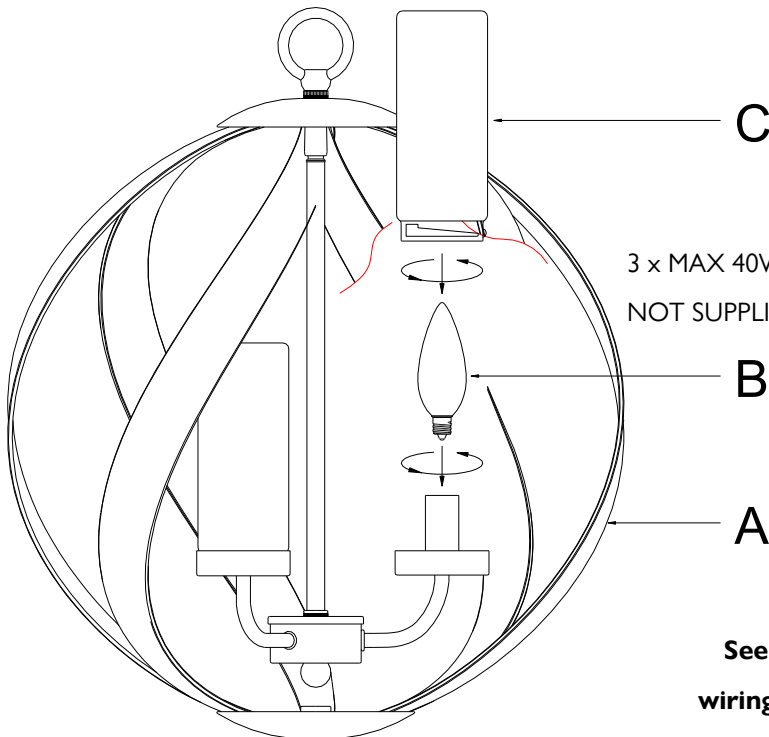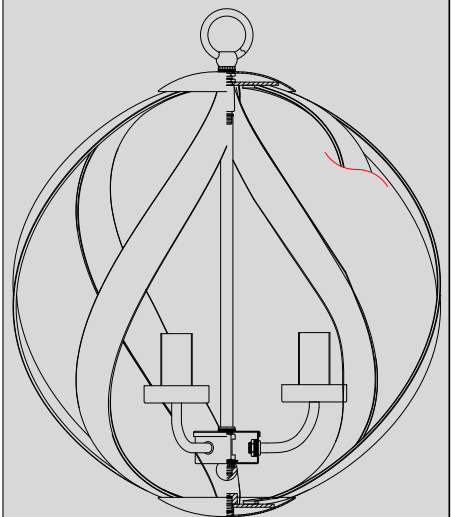

3 x MAX 40W E14 NOT SUPPLIED

See final page for wiring instructions.